

SECTION 2

 
DESTINATION SEARCH

Destination search


- Destination search 52
 - Selecting the search area 52
 - Destination search by Home 54
 - Destination search by Preset destinations 54
 - Destination search by "Address" 55
 - Destination search by "Point of Interest" 59
 - Destination search by "Previous Destinations" 65
 - Destination search by "Address Book" 66
 - Destination search by "Emergency" 66
 - Destination search by "Intersection & Freeway" 67
 - Destination search by "Map" 70
 - Destination search by "Coordinates" 71
 - Deleting set destinations 71
- Starting route guidance 72

DESTINATION SEARCH

Destination search —

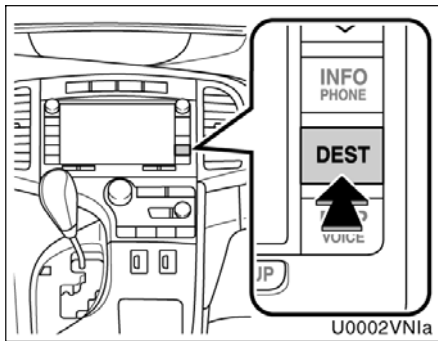

Push the “DEST” button.

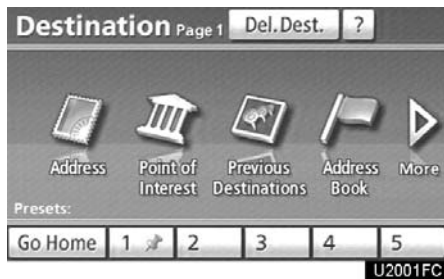 


You can use one of 10 different methods to search your destination. (See pages 54 through 71.)

INFORMATION


When searching the destination, the response to the touch screen button may be slow.

— Selecting the search area

 Change the selected region in order to set a destination from a different region by using “Address”, “Point of Interest” or “Intersection & Freeway”.

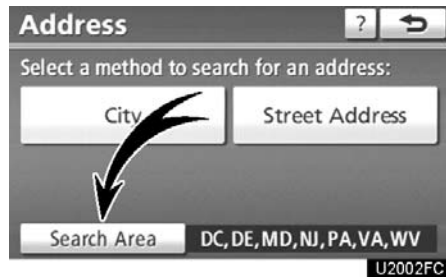

 1. Touch “Search Area” to display a map of the United States and Canada divided into 12 regions. (For map database information and updates, see “Map database information and updates” on page 298.)

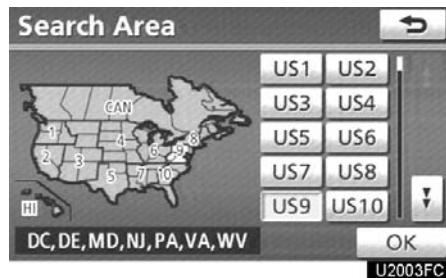

2. Touch one of “US1” through “CAN” to select a region to search.
3. Touch “OK” and the previous screen returns.

DESTINATION SEARCH

U.S.A.	
Button	States included in the search region
"US1"	Idaho Oregon Washington
"US2"	California Nevada
"US3"	Arizona Colorado Montana New Mexico Utah Wyoming
"US4"	Iowa Kansas Minnesota Missouri North Dakota Nebraska South Dakota
"US5"	Oklahoma Texas
"US6"	Illinois Indiana Kentucky Michigan Ohio Wisconsin
"US7"	Arkansas Alabama Louisiana Mississippi Tennessee
"US8"	Connecticut Massachusetts Maine New Hampshire New Jersey New York Rhode Island Vermont


"US9"	Washington, D.C. Delaware Maryland New Jersey Pennsylvania Virginia West Virginia
"US10"	Florida Georgia North Carolina South Carolina
"HI"	Hawaii

Canada	
Button	Provinces and regions included in the search region
"CAN"	All provinces and regions in Canada included in this button.

DESTINATION SEARCH

— Destination search by Home

 1. Push the “DEST” button.

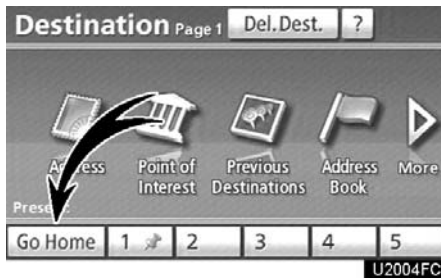

2. Touch “Go Home”.

The screen changes and displays the map location for home and the route preference. (See “Starting route guidance” on page 72.)

If home has not been registered, a message will be displayed and the setting screen will automatically appear.

 
To use this function, it is necessary to set a “Home” address. (To register “Home”, see page 103.)

INFORMATION

Guidance starts from the current vehicle position to your home if “OK” is touched even while driving.

— Destination search by Preset destinations

1. Push the “DEST” button.

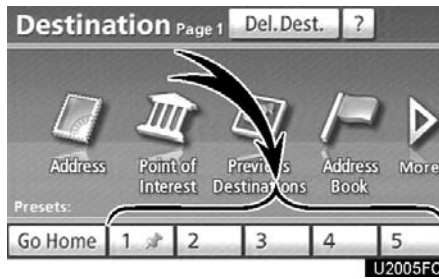

2. Touch any of the preset destination touch screen buttons on the “Destination” screen.

The screen changes and displays the map location of the preset destination point and the route preference. (See “Starting route guidance” on page 72.)

If a preset destination point has not been registered, a message will be displayed and the setting screen will automatically appear.

To use this function, it is necessary to set “Preset Destinations”. (To register “Preset Destinations”, see page 105.)

INFORMATION

 
Guidance starts from the current vehicle position to the preset destination point if “Go to Ⓞ” is touched even while driving.

— Destination search by “Address”

There are 2 ways to search a destination by address.

- (a) Search by city
- (b) Search by street address


1. Push the “DEST” button.
2. Touch “Address” on the “Destination” screen.

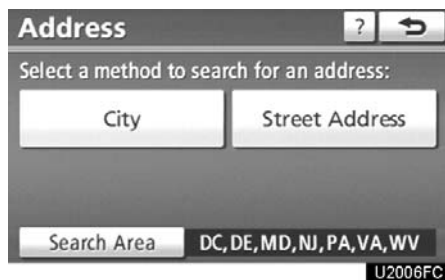

3. Touch the button for the desired method.

(a) Selecting a city to search

 1. Push the “DEST” button.
2. Touch “Address” on the “Destination” screen.

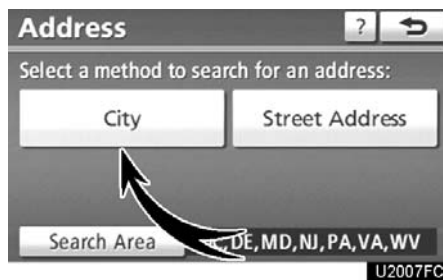

3. Touch “City”.



4. Input a city name.

 


5. Touch the button of the desired city name from the displayed list.

DESTINATION SEARCH




6. Input the street name and touch "OK".

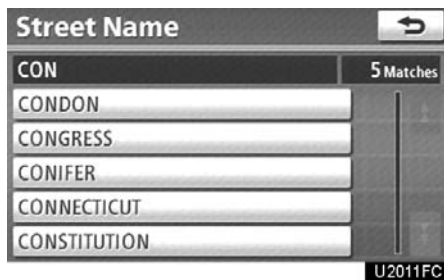


7. When the desired street name is found, touch the corresponding button.

 The screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 72.)

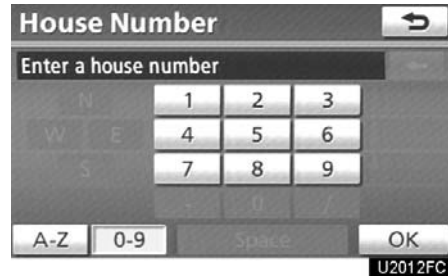

 8. Input a house number.

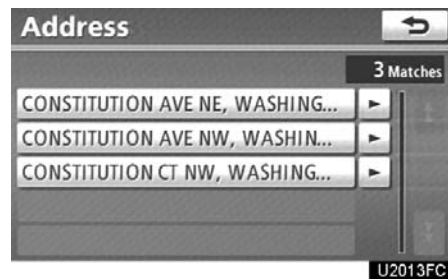

If the same address exists in more than one city, the current screen changes to the address list screen.

SELECTING FROM THE LAST 5 CITIES



1. Touch "Last 5 Cities".



 
2. Touch the button of the desired city name.

If the navigation system has never been used, this function will not be available.


The current screen changes to the screen for inputting a street name. (See "(a) Selecting a city to search" on page 55.)

(b) Search by street address

1. Push the "DEST" button.
2. Touch "Address" on the "Destination" screen.

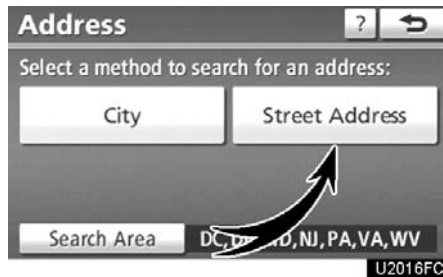

 3. Touch "Street Address".

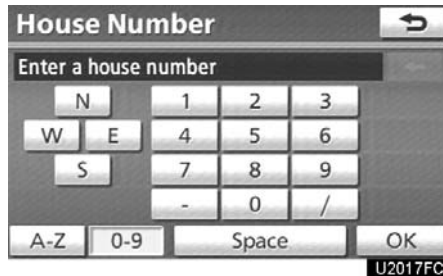

4. Touch numbers directly on the screen to input a house number.

After inputting a house number, touch "OK" to display the screen for inputting a street name.



5. Input the street name and touch "OK".

DESTINATION SEARCH



6. When the desired street name is found, touch the corresponding button.

The screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 72.)

If the same address exists in more than one city, the current screen changes inputting the city name or to the address list screen.



7. Input a city name.



8. Touch the button of the desired city name from the displayed list.

INFORMATION

You can search for a street name using just the body.

Example : S WESTERN AVE

 
You can input "S WESTERN AVE", "WESTERN AVE" or "WESTERN"

— Destination search by “Point of Interest”

There are 3 ways to search by Points of Interest.

- (a) Search by name
- (b) Search by category
- (c) Search by phone #

1. Push the “DEST” button.
2. Touch “Points of Interest” on the “Destination” screen.

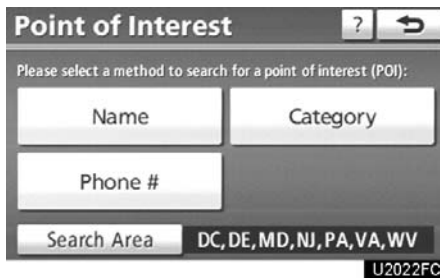


3. Touch the button for the desired method.

(a) Search by “Name”

1. Push the “DEST” button.
2. Touch “Point of Interest” on the “Destination” screen.
3. Touch “Name” on the “Point of Interest” screen.



 4. Input the name of the Point of Interest.

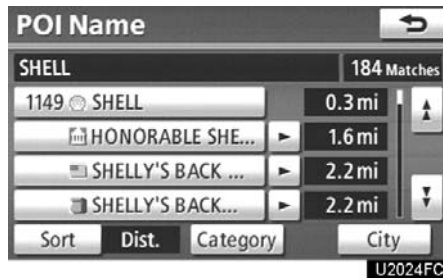

5. Touch the button of the desired destination.

 
The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 72.)

When inputting the name of a specific Point of Interest, and there are two or more sites with the same name, the list screen is displayed.

INFORMATION

To search for a facility name using multiple search words, put a space between each word.

DESTINATION SEARCH

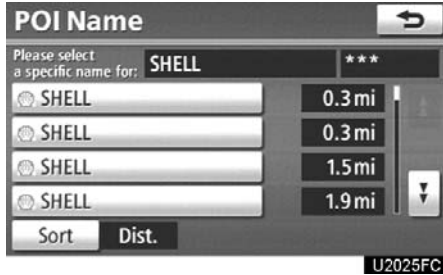


Touch the button of the desired destination.

If the same name exists in more than one city, a search can be performed more easily with "City" and "Category". (See "• Selecting a city to search" on page 60 and "• Selecting from the categories" on page 61.)

INFORMATION

The desired Point of Interest can be displayed on the map screen. (See " — Display POI icons" on page 92.)

 • Selecting a city to search

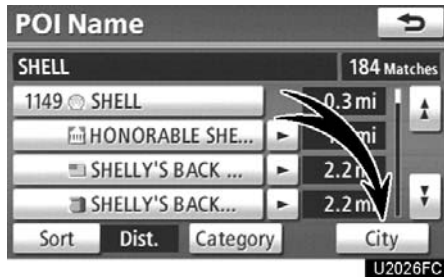

1. Touch "City".



2. Input the city name.

 


3. Touch the button of the desired city name from the displayed list.

INFORMATION

To cancel the city setting, touch "Any City".

● **Selecting from the categories**

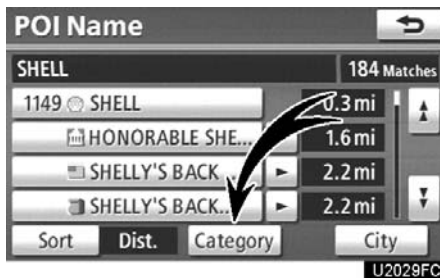


Touch “Category”.



If the desired POI category is on the screen, touch the name to display a detailed list of the POI category.

 If the desired POI category is not on the screen, touch “**List All Categories**” to list all POI categories.

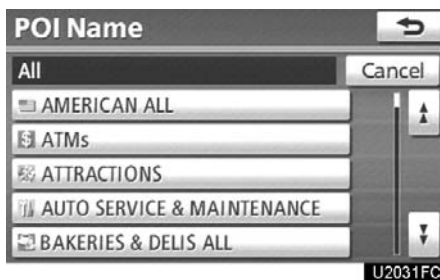

When the desired category is touched, the POI name list screen is displayed.

(b) **Search by “Category”**

The destination can be set by selecting the search point and the POI category.

1. Push the “DEST” button.
2. Touch “Point of Interest” on the “Destination” screen.
3. Touch “Category” on the “Point of Interest” screen.



Set the search point by the following method:

1. Set the search point from near the vehicle’s current position
2. Set the search point from along the chosen route
3. Set the search point from near a city center
4. Set the search point from near a destination

It is possible to display the names of POIs located within approximately 200 miles (320 km) from the selected search point.

DESTINATION SEARCH

SETTING THE SEARCH POINT FROM NEAR HERE

Touch “Near Here”.

The search point is set at the current position, and the “POI Category” screen will be displayed. (See page 64.)

SETTING THE SEARCH POINT FROM ALONG MY ROUTE

Touch “Along My Route”.

The search point is set and the “POI Category” screen will be displayed. (See page 64.)

SETTING THE SEARCH POINT FROM NEAR CITY CENTER

1. Touch “Near City Center”.



2. Input the city center name.



3. Touch the button of the desired city center name.

The search point is set and the “POI Category” screen will be displayed. (See page 64.)

SELECTING FROM THE LAST 5 CITIES

1. Touch "Near City Center".



2. Touch "Last 5 Cities".

 


3. Touch the button of the desired city center name.

The search point is set and the "POI Category" screen will be displayed. (See page 64.)

SETTING THE SEARCH POINT FROM NEAR A DESTINATION

1. Touch "Near a Destination".

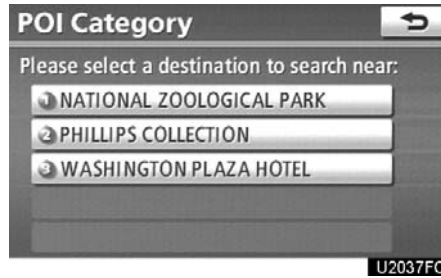

2. Touch the button of the desired destination.

The search point is set and the "POI Name" screen will be displayed. (See page 64.)

DESTINATION SEARCH

- **To search POIs near the search point**

When the search point is set, the “POI Category” screen will be displayed.



Select the desired POI category.

If the desired POI category is not on the screen, touch “List All Categories” to list all POI categories.



Select the desired POI category from the list.



By touching the button of the desired item, the screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 72.)

(c) Search by “Phone #”

 
1. Push the “DEST” button.
2. Touch “Point of Interest” on the “Destination” screen.
3. Touch “Phone #” on the “Point of Interest” screen.



4. Input a telephone number.
5. After inputting a telephone number, touch “OK”.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 72.)

If there is more than one site with the same number, the following screen will be displayed.

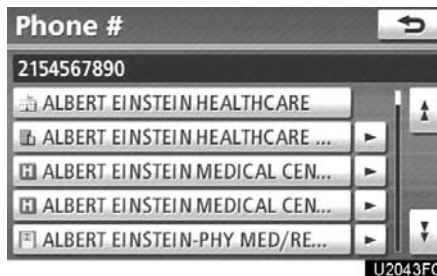


— Destination search by “Previous Destinations”

INFORMATION

- *If there is no match for the telephone number inputted, a list of identical numbers with different area codes will be displayed.*
- *To set an address book entry as a destination using the phone number, the number must already be registered. (See page 113.)*

 1. Push the “DEST” button.
2. Touch “Previous Destinations” on the “Destination” screen.

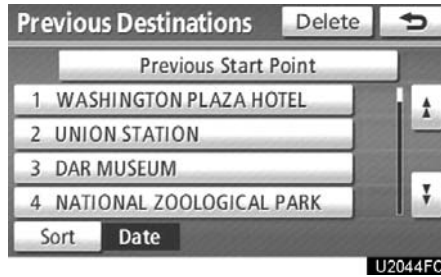

The previous starting point and up to 100 previously set destinations are displayed on the screen.

3. Touch the button of the desired destination.

“Delete”: To delete the previous destination. (To delete previous destinations, see page 119.)

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 72.)

INFORMATION

 
The list of previous destinations can also be deleted by touching “Delete Previous Dest.” on the “Navigation Settings” screen when the vehicle is stopped. (See “ — Deleting previous destinations” on page 119.)

DESTINATION SEARCH

— Destination search by “Address Book”

1. Push the “DEST” button.
2. Touch “Address Book” on the “Destination” screen.

A list of registered address book entries is displayed.

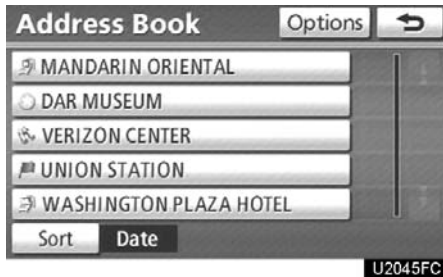

3. Touch the button of the desired address book entry.

“Options”: To register or edit address book. (See page 108.)

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 72.)

— Destination search by “Emergency”

 
1. Push the “DEST” button.
2. Touch “Emergency” on the second page of the “Destination” screen.

The display changes to a screen to select police stations, dealers, hospitals or fire stations. While driving, only nearby police stations, dealers, hospitals, or fire stations are shown. The current position is shown with an address, and the latitude and the longitude at the top of the screen.



3. Touch the desired emergency category.

The selected emergency category list is displayed.

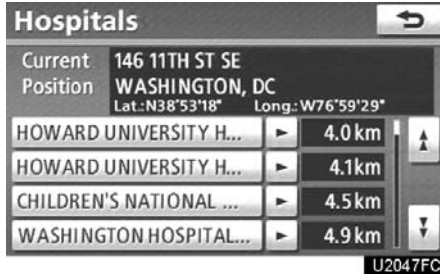

4. Touch the button of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 72.)

INFORMATION

 
The navigation system does not guide in areas where route guidance is unavailable. (See page 297.)

— Destination search by "Intersection & Freeway"

There are 2 ways to search.

- (a) Search by intersection
- (b) Search by Freeway Entrance/Exit

1. Push the "DEST" button.
2. Touch "Intersection & Freeway" on the second page of the "Destination" screen.

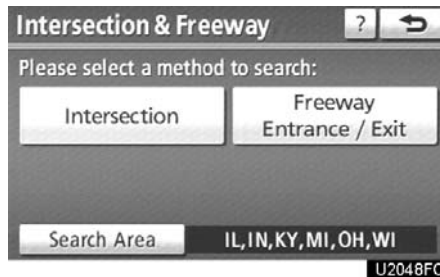

3. Touch the button for the desired method.

DESTINATION SEARCH

(a) Search by “Intersection”

1. Push the “DEST” button.
2. Touch “Intersection & Freeway” on the second page of the “Destination” screen.
3. Touch “Intersection” on the “Intersection & Freeway” screen.



 
4. Input the name of the first intersecting street which are located near the destination to be set.
5. Touch “OK”.



6. Touch the button of the desired item.




7. Input the name of the second intersecting street.

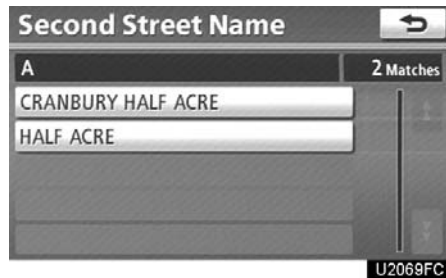

8. Touch the button of the desired item.

 After inputting the two intersecting streets, the screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 72.)

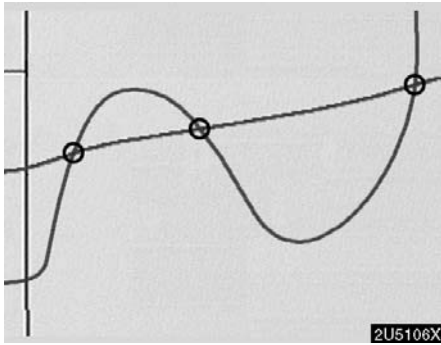

If the same two streets cross at more than one intersection, the screen changes and displays the menu to select the city name where the streets intersect. Select the city, and the map location of the selected destination and the route preference. (See "Starting route guidance" on page 72.)

(b) Search by "Freeway Entrance/Exit"

1. Push the "DEST" button.
2. Touch "Intersection & Freeway" on the second page of the "Destination" screen.
3. Touch "Freeway Entrance/Exit" on the "Intersection & Freeway" screen.



4. To input a freeway name.

Be sure to use the complete name of the freeway or highway, including the hyphen, when entering the destination. Freeways and interstates use an "I" (I-405). US highways use the state designation before the number (CA-118).



5. Select the desired freeway by touching the button.

DESTINATION SEARCH



6. Either a freeway “Entrance” or “Exit” can be selected.



7. To input a freeway entrance or exit name.

8. Touch “OK”.

 


9. Touch the button of the desired entrance or exit name.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 72.)

— Destination search by “Map”

1. Push the “DEST” button.
2. Touch “Map” on the second page of the “Destination” screen.

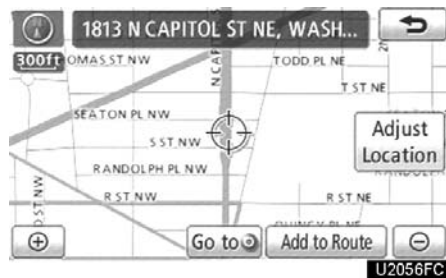


The screen changes and displays the map location that was previously displayed just before the destination input operation and the route preference. (See “Starting route guidance” on page 72.)

INFORMATION

Guidance starts if “OK” is touched even while driving. However, the cursor cannot be moved.

— Destination search by “Coordinates”

 1. Push the “DEST” button.
2. Touch “Coordinates” on the second page of the “Destination” screen.

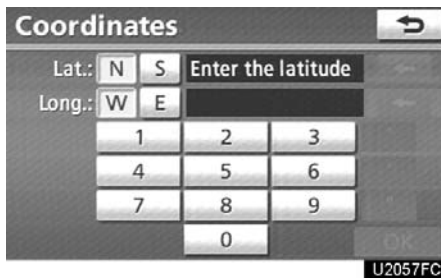

3. Input the latitude and the longitude.
4. When the input is finished, touch “OK”.

By touching the button of the desired point, the screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 72.)

— Deleting set destinations

A set destination can be deleted.

1. Push the “DEST” button.
2. Touch “Del. Dest.” on the “Destination” screen.

When more than one destination is set, a list will be displayed on the screen.



3. Touch the destination for deletion.
 - “Select All”: To select all destinations on the list.
 - “Unselect All”: To unselect all of the selected destinations.
4. Touch “Delete”.



A message appears to confirm the request to delete.

5. To delete the destination(s), touch “Yes”.

If “Yes” is touched, the data cannot be recovered.

If “No” is touched, the previous screen will return.

DESTINATION SEARCH

 
The system searches for the guidance route again, and displays the entire route.

INFORMATION

Set destinations can also be deleted by touching "Route". (See " — Deleting destinations" on page 85.)


Starting route guidance

After inputting the destination, the screen changes and displays the map location of the selected destination and the route preference.

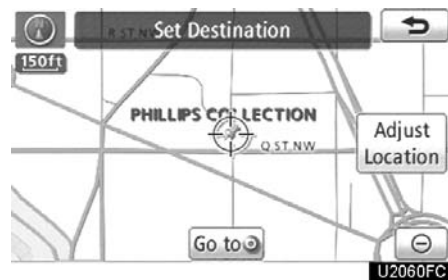

1. Scroll the map to the desired point.

 "Adjust Location": To adjust the position in smaller increments.

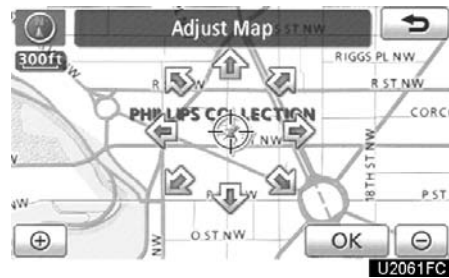


When an arrow facing the desired point is touched, the map scrolls in that direction.

Releasing the finger from the arrow will stop the scrolling.

2. Touch "Go to" .

The system starts route search and displays recommended routes.

If there is already a set destination, **"Go to" ** and **"Add to Route"** are displayed.

"Go to" : To delete the existing destinations and set a new one.

"Add to Route": To add a destination.

"Info.": If this button is displayed on the top of the screen, touch it to view items such as name, address, and phone number.



- 1 Current position
- 2 Destination point
- 3 Type of the route and the distance
- 4 Distance of the entire route

3. To start guidance, touch “OK”.

“Turn List”: The following screen displays the list of the roads up to the destination.

“3 Routes”: To select the desired route from 3 possible routes. (See page 74.)

“Edit Route”: To change the route. (See page 75.)

INFORMATION

- Guidance can be paused or resumed. (See “Pausing and resuming guidance” on page 91.)
- If “OK” is touched until a beep sounds, demo mode will start. Push the “MAP/VOICE” button to finish Demo mode.
- The route for returning may not be the same as that for going.
- The route guidance to the destination may not be the shortest route nor a route without traffic congestion.
- Route guidance may not be available if there is no road data for the specified location.
- When setting the destination on a map with a scale larger than 0.5 miles (800 m), the map scale changes to 0.5 miles (800 m) automatically. Set the destination again.
- If a destination is entered, the road nearest to the point you selected is set as the destination.



CAUTION

Be sure to obey traffic regulations and keep road conditions in mind while driving. If a traffic sign on the road has been changed, the route guidance may provide incorrect information.

DESTINATION SEARCH

3 ROUTES SELECTION



1. To select the desired route from 3 routes, touch “3 Routes”.



2. Touch “Quick”, “Alt.” or “Short” to select the desired route.

“Quick”: Recommended route.

This route is indicated by an orange line.

“Alt.”: Alternative route.

This route is indicated by a purple line.

“Short”: A route by which you can reach the destination in the shortest distance.

This route is indicated by a green line.

“Info.”: To display the following information about each of the 3 routes.

	Quick	Alt.	Short
1	5 h 30 min	6 h 26 min	5 h 35 min
2	296 miles	346 miles	290 miles
3			
4	284 miles	333 miles	267 miles
5			

U2065FC

1 Time necessary for the entire trip

2 Distance of the entire trip

3 Toll road

4 Freeway

5 Ferry

● **Edit route**

You can again designate the conditions of the route to the destination.



INFORMATION	
●	<i>Even if the “Freeways” indicator is dimmed, the route cannot avoid including a freeway in some cases.</i>
●	<i>If the calculated route includes a trip by ferry, the route guidance shows a sea route. After you travel by ferry, the current vehicle position may be incorrect. Upon reception of GPS signals, it is automatically corrected.</i>

Touch “Edit Route”.



“**Add**”: To add destinations. (See page 84.)

“**Delete**”: To delete destinations. (See page 85.)

“**Reorder**”: To reorder destinations. (See page 84.)

“**Preferences**”: A number of choices are provided on the conditions which the system uses to determine the route to the destination. (See page 89)

DESTINATION SEARCH
