

1 Before driving

1-1. Key information
 Keys 26

1-2. Opening, closing and locking the doors
 Smart key system..... 28
 Wireless remote control 43
 Side doors 53
 Back door 59

1-3. Adjustable components (seats, mirrors, steering wheel)
 Front seats 69
 Rear seats..... 72
 Head restraints 75
 Seat belts 77
 Steering wheel 84
 Inside rear view mirror..... 85
 Outside rear view mirrors 87

1-4. Opening and closing the windows and moon roof
 Power windows 90
 Moon roof 93
 Sunshade 96

1-5. Refueling
 Opening the fuel tank cap..... 97

1-6. Theft deterrent system
 Engine immobilizer system 101
 Alarm 104
 Theft prevention labels (U.S.A.)..... 107

1-7. Safety information
 Correct driving posture 108
 SRS airbags 110
 Front passenger occupant classification system..... 124
 Child restraint systems 130
 Installing child restraints 136

2 When driving

2-1. Driving procedures
 Driving the vehicle 152
 Engine (ignition) switch (vehicles with smart key system) 163
 Engine (ignition) switch (vehicles without smart key system) 167
 Automatic transmission 170
 Turn signal lever 175
 Parking brake 176
 Horn..... 177

2-2. Instrument cluster

| | |
|--|-----|
| Gauges and meters | 178 |
| Indicators and warning lights | 181 |
| Multi-information display (TFT type) | 184 |
| Multi-information display (LCD type) | 198 |

2-3. Operating the lights and wipers

| | |
|--|-----|
| Headlight switch | 202 |
| Automatic High Beam (vehicles with discharge headlights) | 207 |
| Fog light switch | 214 |
| Windshield wipers and washer | 215 |
| Rear window wiper and washer | 217 |

2-4. Using other driving systems

| | |
|--------------------------------|-----|
| Cruise control | 218 |
| Rear view monitor system | 222 |
| Driving assist systems | 226 |

2-5. Driving information

| | |
|---------------------------------|-----|
| Utility vehicle precautions ... | 233 |
| Cargo and luggage | 238 |
| Vehicle load limits | 243 |
| Winter driving tips | 245 |
| Trailer towing | 250 |
| Dinghy towing | 262 |

3 Interior features

3-1. Using the air conditioning system and defogger

| | |
|---|-----|
| Automatic air conditioning system | 266 |
| Manual air conditioning system | 275 |
| Rear window defogger | 281 |

3-2. Using the audio system

| | |
|---------------------------------------|-----|
| Audio system type | 283 |
| Using the radio | 287 |
| Using the CD player | 294 |
| Playing back MP3 and WMA discs | 302 |
| Optimal use of the audio system | 310 |
| Using the AUX adapter | 312 |
| Using the steering switches | 313 |

3-3. Using the rear seat entertainment system

| | |
|---|-----|
| Rear seat entertainment system features | 316 |
| Using the DVD player (DVD video) | 323 |
| Using the DVD player (video CD) | 332 |
| Using the DVD player (audio CD/CD text) | 334 |
| Using the DVD player (MP3 discs) | 335 |
| Using the video mode | 337 |
| Changing the initial settings | 339 |

3-4. Using the hands-free system (for cellular phone)

- Hands-free system (for cellular phone) 348
- Using the hands-free system..... 351
- Making a phone call 359
- Setting a cellular phone..... 365
- Security and system setup 371
- Using the phone book 375

3-5. Using the interior lights

- Interior lights list 384
- Personal/interior light main switch 385
- Personal/interior lights and luggage compartment light 386

3-6. Using the storage features

- List of storage features..... 388
- Glove box 389
- Console boxes 390
- Overhead console 392
- Cup holders..... 393
- Bottle holders 395
- Auxiliary boxes 396

3-7. Other interior features

- Sun visors 400
- Vanity mirror 401
- Power outlets 402
- Seat heaters 405
- Armrest 407
- Floor mats..... 408
- Luggage compartment features 409
- Garage door opener 411
- Compass 418

4 Maintenance and care

4-1. Maintenance and care

- Cleaning and protecting the vehicle exterior 424
- Cleaning and protecting the vehicle interior 427

4-2. Maintenance

- Maintenance requirements 430
- General maintenance 432
- Emission inspection and maintenance (I/M) programs 435

4-3. Do-it-yourself maintenance

| | |
|--|-----|
| Do-it-yourself service precautions | 436 |
| Hood | 440 |
| Positioning a floor jack | 442 |
| Engine compartment | 444 |
| Tires | 461 |
| Tire inflation pressure | 468 |
| Wheels | 472 |
| Air conditioning filter | 474 |
| Key battery | 477 |
| Checking and replacing fuses | 481 |
| Light bulbs | 491 |

5 When trouble arises

5-1. Essential information

| | |
|---|-----|
| Emergency flashers | 504 |
| If your vehicle needs to be towed | 505 |
| If you think something is wrong | 509 |
| Fuel pump shut off system | 510 |
| Event data recorder | 511 |

5-2. Steps to take in an emergency

| | |
|--|-----|
| If a warning light turns on or a warning buzzer sounds | 513 |
| If a warning message is displayed | 528 |
| If you have a flat tire | 529 |
| If the engine will not start.... | 540 |
| If the shift lever cannot be shifted from "P" | 543 |
| If you lose your keys | 544 |
| If the electronic key does not operate properly (vehicles with smart key system) | 545 |
| If the battery is discharged | 548 |
| If your vehicle overheats | 553 |
| If the vehicle becomes stuck | 556 |

6 Vehicle specifications

6-1. Specifications

| | |
|--|-----|
| Maintenance data (fuel, oil level, etc.) | 560 |
| Fuel information | 572 |
| Tire information | 575 |

6-2. Customization

| | |
|-----------------------------|-----|
| Customizable features | 590 |
|-----------------------------|-----|

6-3. Initialization

| | |
|---------------------------|-----|
| Items to initialize | 597 |
|---------------------------|-----|

7 For owners

Reporting safety defects for
U.S. owners 600

Seat belt instructions for
Canadian owners
(in French)..... 601

Index

Abbreviation list 604

Alphabetical index 606

What to do if... 614

1

2

3

4

5

6

7