


3-3. Using the rear seat entertainment system

Rear seat entertainment system features*


The rear seat entertainment system is designed for the rear passengers to enjoy audio and DVD video separately from the front audio system.

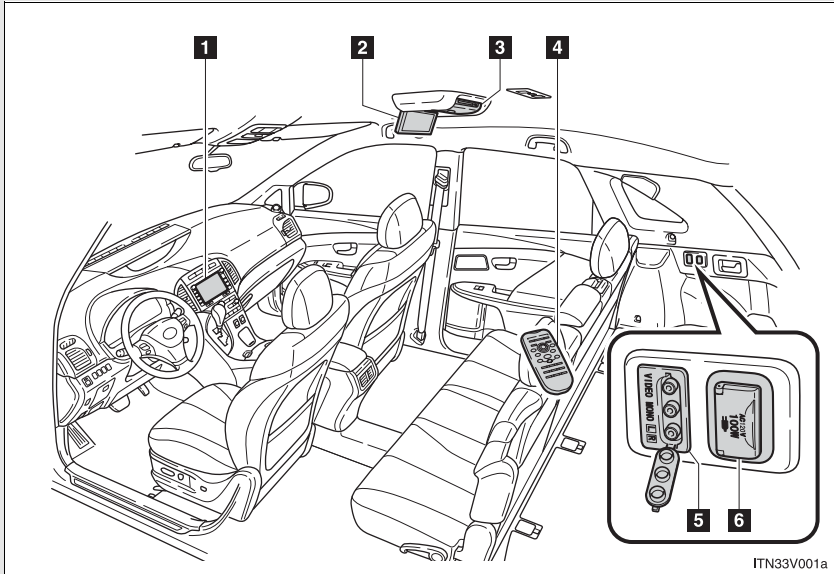

- 1** Front audio system
- 2** Display
- 3** DVD player
- 4** Rear seat entertainment system controller
- 5** A/V input adapter
- 6** Power outlet


*: If equipped

Opening and closing the display

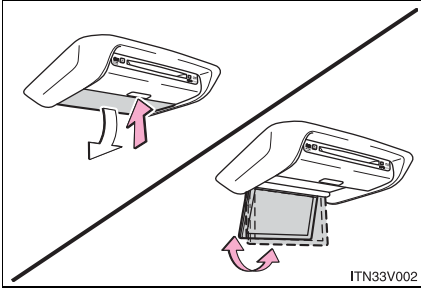

Press the lock release button to open the display.


Pull the display down to an easily viewable angle (between 90° and 125°).

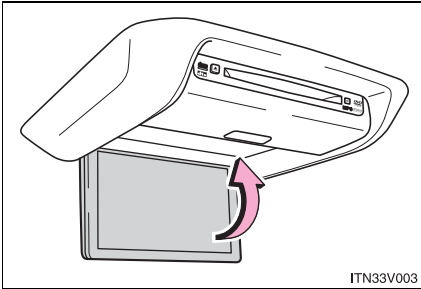

To close the display, push the display up until a click is heard.

The illumination of the screen is automatically turned off when the display is closed. However, the rear seat entertainment system is not turned off.

Loading a disc

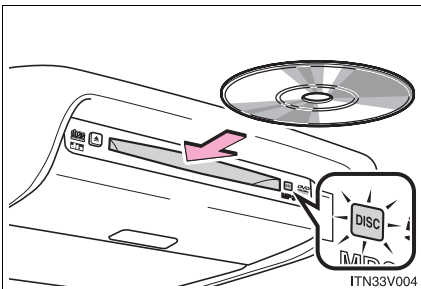



Insert the disc into the slot with the label side up.

The "DISC" indicator light turns on while the disc is loaded.

The player will play the track or chapter, and will repeat it after it reaches the end.

Ejecting a disc

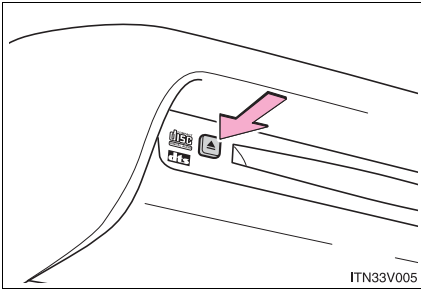

Press  and remove the disc.

■ The rear seat entertainment system can be used when

▶ Vehicles with smart key system

The “ENGINE START STOP” switch is in ACCESSORY or IGNITION ON mode.

▶ Vehicles without smart key system

The engine switch is in the “ACC” or “ON” position.

■ Discs that can be used

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



■ When appears on the screen

It indicates that the selected icon cannot be used at this time.

■ Rear system lock

→ “Navigation System Owner’s Manual”

■ **If a disc is removed from the front audio system while the rear seat entertainment system is in use**

The rear seat entertainment system will be turned off.

■ **Error messages**


DISC CHECK: Indicates that the disc is dirty, damaged or was inserted upside down. Clean the disc or insert it correctly.

REGION CODE ERROR: Indicates that the DVD region code is not set properly.


DVD ERROR: Indicates that there is a problem inside the player. Eject the disc. Set the disc again.

If the malfunction still exists, take the vehicle to your Toyota dealer.

■ **Before using the controller (for new vehicle owners)**

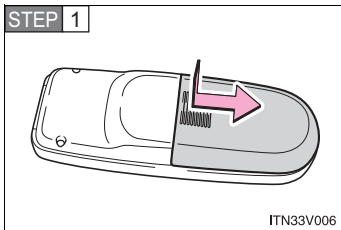


Remove the cover.

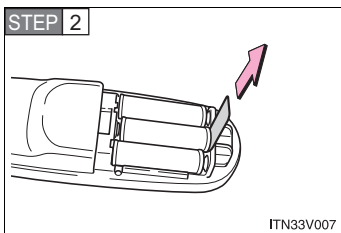

Remove the insulating sheet.

■ **When the controller batteries are fully depleted**

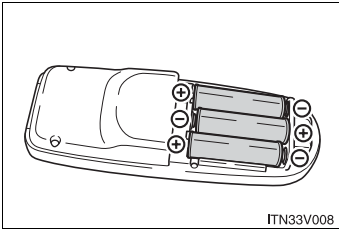

Remove the depleted batteries and install new 3 AA batteries.

■ **If the remote controller batteries are discharged**

The following symptoms may occur.

- ┆ The rear seat entertainment system controller will not function properly.
- ┆ The operational range is reduced.

■ **When using AA batteries**

Batteries can be purchased at your Toyota dealer, electric appliance shop, or camera stores.

Replace only with the same or equivalent type recommended by a Toyota dealer.

Dispose of used batteries according to the local laws.

■ **Headphones**

With some headphones generally available in the market, it may be difficult to catch signals properly. Toyota recommends the use of Toyota genuine wireless headphones.

Contact your Toyota dealer for further details.

n Volume

- l Adjust the volume when you use the headphones. Loud sounds may have a significant impact on the human body.
- l Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or when you change to a different audio source. Be sure to adjust the volume with this in mind.

CAUTION

n **When the rear seat entertainment system is not used**

Keep the display closed.

In the event of an accident or sudden braking, an occupant may hit the opened display, resulting in injury.

n **To prevent accidents and electric shock**

Do not disassemble or modify the remote controller.

n **When the remote controller is not used**

Stow the remote controller.

Injuries may result in the event of an accident or sudden braking.

n **Removed battery and other parts**

Keep away from children.

These parts are small and if swallowed by a child they can cause choking.

n **DVD video precaution**

Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or when you change to a different audio source.

Loud sounds may have a significant impact on the human body or pose a driving hazard. Keep this in mind when you adjust the volume.

 NOTICE

n Cleaning the display

Wipe the display with a dry soft cloth.

If the screen is wiped with a rough cloth, the surface of the screen may be scratched.

n To prevent damage to the remote controller

! Keep the remote controller away from direct sunlight, high temperature and high humidity.

! Do not drop or knock the remote controller against hard objects.

! Do not sit on or place heavy objects on the remote controller.

n Discs and adapters that cannot be used

→P. 300

n Player precautions

Failure to follow the precautions below may result in damage to the discs or the player itself.

! Do not insert anything other than discs into the disc slot.

! Do not apply oil to the player.

! Store discs away from direct sunlight.

! Never try to disassemble any part of the player.

n For normal operation after replacing the battery

Observe the following precautions to prevent accidents.

! Always work with dry hands.


Moisture may cause the battery to rust.

! Do not touch or move any other components inside the remote control.

! Do not bend either of the battery terminals.


3-3. Using the rear seat entertainment system Using the DVD player (DVD video)

n Controller

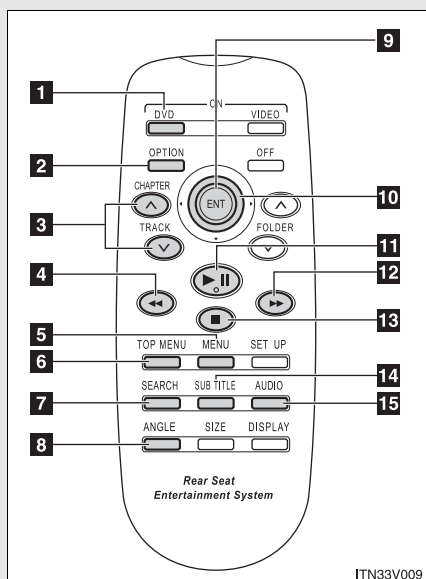


- 1** Turning on the DVD mode
- 2** Turning on or off the operation switches (icon) on the display
- 3** Selecting a chapter
- 4** Reversing a disc
- 5** Turning on the menu screen
- 6** Turning on the title selection screen
- 7** Searching the title
- 8** Changing the screen angle
- 9** Inputting the selected switch (icon)
- 10** Selecting a switch (icon)
- 11** Playing/pausing a disc
- 12** Fast forwarding a disc
- 13** Stopping a disc
- 14** Changing the subtitle language
- 15** Changing the audio language

n Display (page 1)

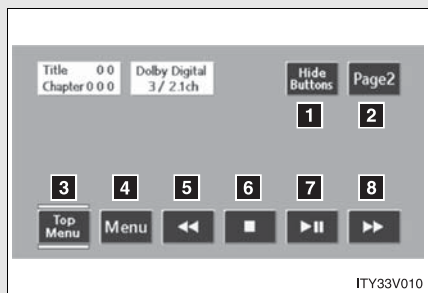


- 1 Turning off the operation switches (icon) on the display
- 2 Displaying page 2
- 3 Turning on or off the title selection screen for the disc
- 4 Turning on or off the menu screen for the disc
- 5 Reversing a disc
- 6 Stopping a disc
- 7 Pausing the disc/canceling the pause
- 8 Fast forwarding a disc

n Display (page 2)

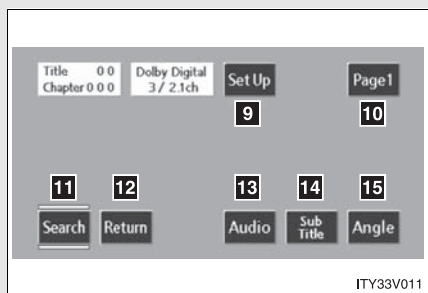



- 9 Displaying the initial setting screen
- 10 Displaying page 1
- 11 Search for a title
- 12 Returning to the previous screen
- 13 Changing the audio language
- 14 Changing the subtitle language
- 15 Changing the angle

Turning on or off the operation switches



Press  to turn on the operation switches.

Press  once again or select  to turn off the operation switches.


Turning on the title selection screen

Press  or select  to turn on the title selection screen. For the operation of the title selection screen, see the separate manual for the DVD disc.


Turning on the menu screen



Press  or select  to turn on the menu screen. For the operation of the menu screen, see the separate manual for the DVD disc.

Returning to the previous screen


Select  to return to the previous screen. For the operation of the menu screen, see the separate manual for the DVD disc.

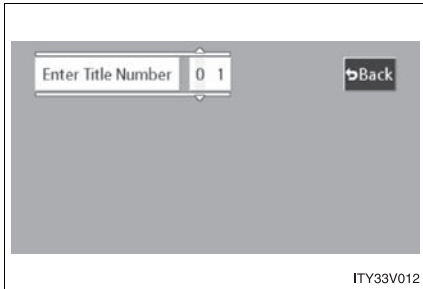
Searching for a title



 
Press  or select  to display the screen to search for a title.



Select the title number, and press



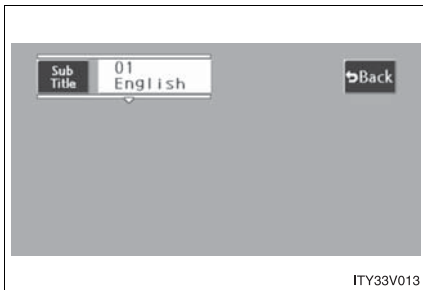


Select  to return to the previous screen.

Changing the subtitle language





Press  or select  to display the subtitle language screen.


Each time  is pressed or  is selected, another language stored on the disc is selected.

Select  to return to the previous screen.

Changing the audio language

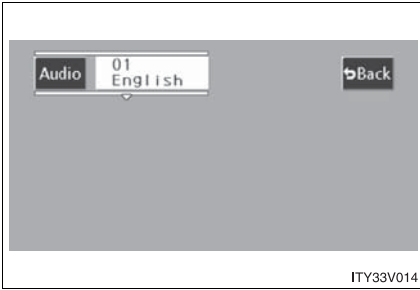



Press  or select **Audio** to display the audio language screen.


Each time  is pressed or **Audio** is selected, another language stored on the disc is selected.

Select **Back** to return to the previous screen.

Changing the angle

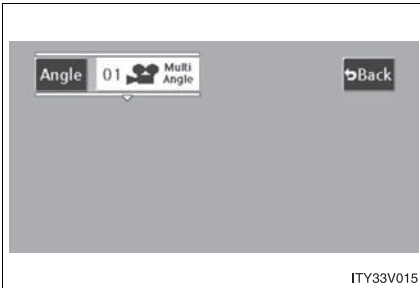

Press  or select **Angle** to display the screen to change the angle.

Each time  is pressed or **Angle** is selected, the angle changes.

Select **Back** to return to the previous screen.







n DVD player and DVD video discs

This DVD player is compatible NTSC color TV formats. DVD video discs conforming to other formats such as PAL or SECAM cannot be used.

▮ **Region codes**

Some DVD video discs have a region code indicating where you can use them. If the DVD video disc is not labeled “ALL” or “1”, you cannot use it in this DVD player. If you attempt to play an inappropriate DVD video disc in this player, “REGION CODE ERROR” appears on the screen. Even if the DVD video disc does not have a region code, in some cases you cannot use it.

▮ **Symbols shown on DVD video discs**

Symbol	Meaning
	Indicates NTSC format.
	Indicates the number of audio tracks.
	Indicates the number of language subtitles.
	Indicates the number of angles.
	Indicates the screen display ratios available. Wide screen: 16:9 Standard: 4:3
	Indicates the disc's region code. ALL: in all countries Number: region code

n DVD video disc information

l DVD video discs

Digital Versatile Disc that holds video. DVD video discs have adopted “MPEG2”, one of the world standards of digital compression technologies. The picture data is compressed by 1/40 on average and stored. Variable rate encoding technology in which the volume of data assigned to the picture is changed depending on the picture format has also been adopted. Audio data is stored using PCM and Dolby digital, which enables higher quality of sound. Furthermore, multi-angle and multi-language features will also help you enjoy the more advanced technology of DVD video.

I Viewer restrictions

This feature limits what can be viewed in conformity with the level of restrictions of the country. The level of restrictions varies depending on the DVD video disc. Some DVD video discs cannot be played at all, or violent scenes are skipped or replaced with other scenes.

Level 1: DVD video discs for children can be played.

Level 2-7: DVD video discs for children and G-rated movies can be played.

Level 8: All types of DVD video discs can be played.

I Multi-angle option

You can enjoy the same scene from different angles.

I Multi-language option

You can select the subtitle and audio languages.

I Region codes

The region codes are found on DVD players and DVD discs. If a DVD video disc does not have the same region code as the DVD player, you cannot play the disc on that DVD player. (→P. 328)

I Audio

This DVD player can play linear PCM, Dolby Digital and MPEG audio format DVD. Other decoded types cannot be played.

I Title and chapter

Video and audio programs stored in DVD video discs are divided into parts by title and chapter.

Title: The largest unit of the video and audio programs stored on DVD video discs. Usually, one movie, one album, or one audio program is assigned as a title.

Chapter: A title is comprised of one or more chapters.

n **Sound**

l Dolby Digital

Manufactured under license from Dolby Laboratories.

“Dolby” and the double-D symbol are trademarks of Dolby Laboratories.

Confidential unpublished works.

©1992-1997 Dolby Laboratories. All rights reserved.

l DTS


“DTS” and “DTS Digital Surround” are registered trademarks of Digital Theater System, Inc.

n **MP3 and WMA files**

→P. 306


3-3. Using the rear seat entertainment system Using the DVD player (video CD)

n Controller

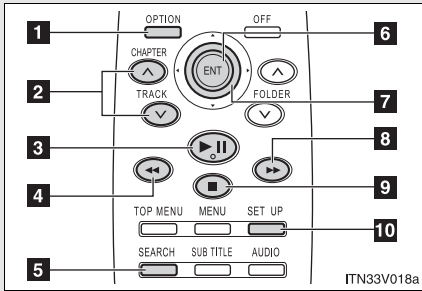


- 1** Turning on or off the operation switches (icon) on the display
- 2** Selecting a chapter
- 3** Playing/pausing a disc
- 4** Reversing a disc
- 5** Displaying operation switches (icon)
- 6** Inputting the selected switch (icon)
- 7** Selecting a switch (icon)
- 8** Fast forwarding a disc
- 9** Stopping a disc
- 10** Changing the initial setting

n Display (page 1)

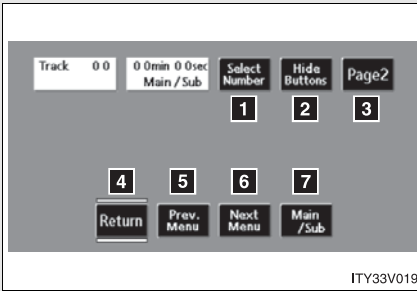

- 1 Selecting a disc menu number
- 2 Turning off the menu screen
- 3 Displaying page 2
- 4 Turning on the disc menu
- 5 Returning to the previous page screen (with the disc menu displayed)
- 6 Proceeding to the next page screen (with the disc menu displayed)
- 7 Changing to a multiplex transmission

n Display (page 2)

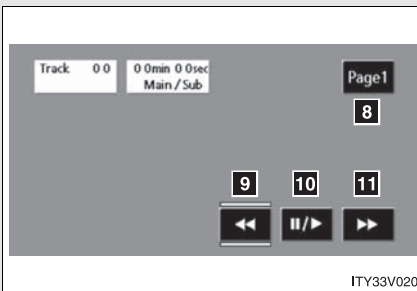

- 8 Displaying page 1
- 9 Reversing a disc
- 10 Pausing the disc/canceling the pause
- 11 Fast forwarding a disc

Selecting a disc menu number


Select **Select Number** to display the disc menu number search screen.


Select the disc menu number, and press **(ENT)** to input it.

Select **Back** to return to the previous screen.

3-3. Using the rear seat entertainment system Using the DVD player (audio CD/CD text)

n Using the control screen

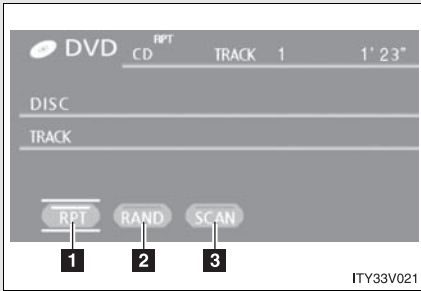

Press  to display the control screen.


- 1** Repeat play
- 2** Random playback
- 3** Search playback


n Canceling random, repeat and scan play

Select ,  or  again.

3-3. Using the rear seat entertainment system Using the DVD player (MP3 discs)

n Using the control screen

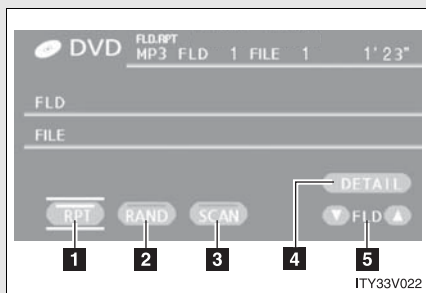

Press  to display the control screen.



- 1 Repeat play
- 2 Random playback
- 3 Search playback
- 4 Displaying file information
- 5 Selecting a folder

Repeat play

n Repeat a file

Select .

n Repeat all of files in a folder



Select , and press and hold  on the remote controller.

Random playback

n Playing files from a particular folder in random order

Select .

n Playing all of the files on a disc in random order

Select , and press and hold  on the remote controller.


Search playback

n **Selecting the desired file by cueing the files in the folder**

Select **SCAN**.

The player will scan all the files in the folder. Each file will be played for 10 seconds.

n **Selecting the desired file by cueing the folders on the disc**


Select **SCAN**, and press and hold  the remote controller.

The player will scan all the folders on the disc. The first file in each folder will be played for 10 seconds.

n **Canceling random, repeat and playback**

Select **RPT**, **RAND** or **SCAN** again.


3-3. Using the rear seat entertainment system Using the video mode

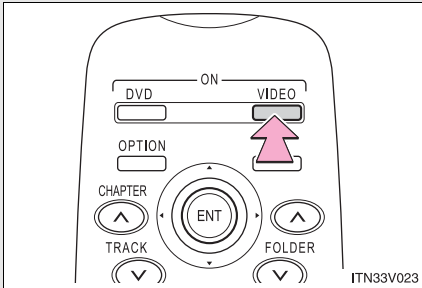

Press **VIDEO** to select the video mode.

Before switching to the video mode, connect the audio-video equipment to the A/V input adapter.

Using the adapter

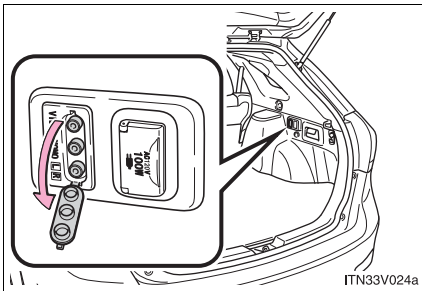

Open the cover.

The A/V input adapter is composed of 3 input adapters.

Yellow: Image input adapter

White: Left channel audio input adapter

Red: Right channel audio input adapter

■ **A/V input adapter**

The rear seat entertainment system plays videos and sound when audio-video equipment is connected to the A/V input adapter. For details, refer to the manufacturer's instructions.

■ **Power outlet**

The power outlet is used to connect the audio-video equipment. (→P. 402)



NOTICE


■ **When the A/V input adapter is not in use**

Keep the A/V input adapter cover closed.

Inserting anything other than an appropriate plug may cause electrical failure or a short circuit.

3-3. Using the rear seat entertainment system

Changing the initial settings

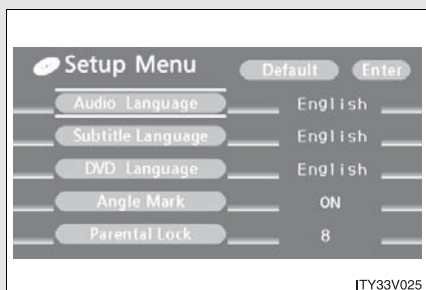

Press **SET UP** or select **Set Up** to display the initial setting screen.

The following initialization can be changed here.


- 1 Audio language
- 1 Subtitle language
- 1 DVD language
- 1 Angle mark
- 1 Parental lock

Changing the audio language




Select "Audio Language".

Select the language you want to hear, and press  to input it.

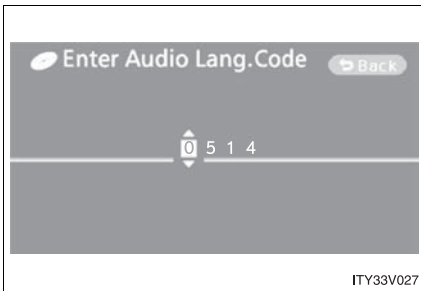


Select "Others" if you cannot find the language you want to hear. Enter the appropriate 4-digit language code. (→P. 344)


Select a number, and press  to input it.


If a code that is not in the list is entered, "Incorrect Code" will appear on the screen.

Changing the subtitle language

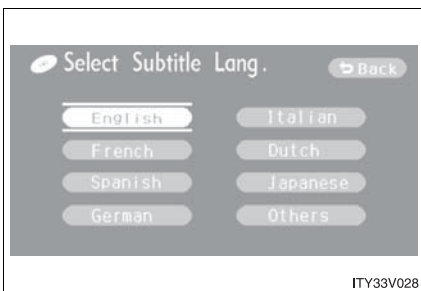


Select "Subtitle Language".

Select the language you want to read, and press  to input it.

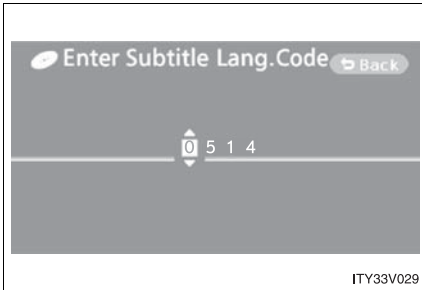

Select “Others” if you cannot find the language you want to read. Enter the appropriate 4-digit language code. (→P. 344)

Select a number, and press  to input it.


If a code that is not in the list is entered, “Incorrect Code” will appear on the screen.

Changing the DVD language




Select “DVD Language”.

Select the language you want to read, and press  to input it.

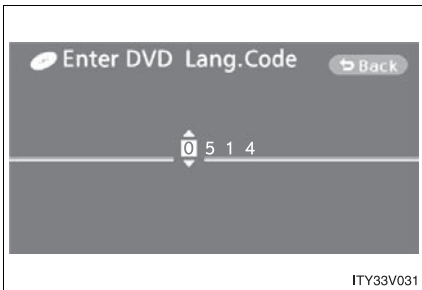


Select “Others” if you cannot find the language you want to read. Enter the appropriate 4-digit language code. (→P. 344)

Select a number, and press  to input it.


If a code that is not in the list is entered, “Incorrect Code” will appear on the screen.

Turning on or off the angle mark

The angle mark can be turned on for discs that are multi-angle compatible.

Each time you press  when "Angle Mark" is selected, the angle mark turns on or off alternately.

Setting viewer restriction levels

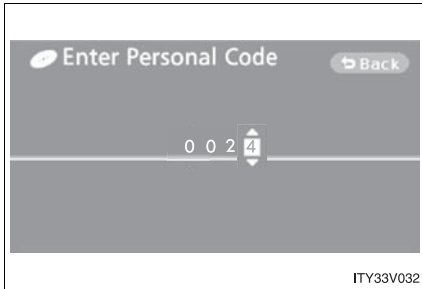

Setting a password allows the viewer restriction to be effective.

Select "Parental Lock".


Enter the password and press




The setting cannot be changed unless the password is entered.

When you forget the password, initialize the password.


(→P. 344)

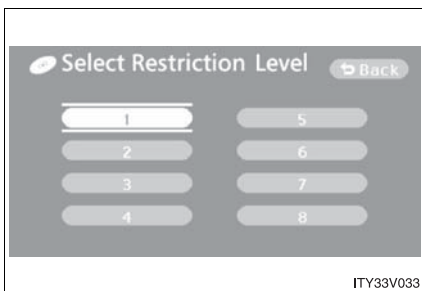


Select a restriction level (1-8),

and press . The smaller the level number, the stricter the age limit.

Setting the display mode

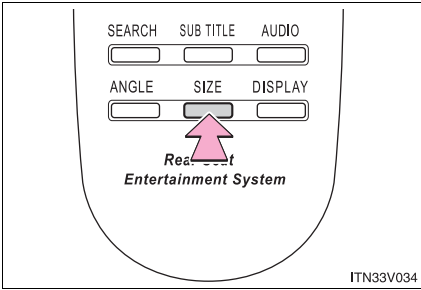


Pressing  changes the display modes sequentially as follows:

Normal → Wide 1 → Wide 2



▮ **Returning to the previous screen**

Select **Back**, and press .

▮ **To initialize the password**

Press **◀** on the remote controller 10 times when the screen to enter the personal code is displayed.

▮ **Language code list**

Code	Language	Code	Language	Code	Language
0514	English	0207	Bulgarian	0712	Galician
0618	French	0208	Bihari	0714	Guarani
0405	German	0209	Bislama	0721	Gujarati
0920	Italian	0214	Bengali	0801	Hausa
0519	Spanish	0215	Tibetan	0809	Hindi
2608	Chinese	0218	Breton	0818	Croatian
1412	Dutch	0301	Catalan	0821	Hungarian
1620	Portuguese	0315	Corsican	0825	Armenian
1922	Swedish	0319	Czech	0901	Interlingua
1821	Russian	0325	Welsh	0905	Interlingue
1115	Korean	0401	Danish	0911	Inupiak
0512	Greek	0426	Bhutani	0914	Indonesian
0101	Afar	0515	Esperanto	0919	Icelandic
0102	Abkhazian	0520	Estonian	0923	Hebrew
0106	Afrikaans	0521	Basque	1001	Japanese
0113	Amharic	0601	Persian	1009	Yiddish
0118	Arabic	0609	Finnish	1023	Javanese
0119	Assamese	0610	Fiji	1101	Georgian


Code	Language	Code	Language	Code	Language
0125	Aymara	0615	Faroese	1111	Kazakh
0126	Azerbaijani	0625	Frisian	1112	Greenlandic
0201	Bashkir	0701	Irish	1113	Cambodian
0205	Byelorussian	0704	Scots-Gaelic	1114	Kannada
1119	Kashmiri	1415	Norwegian	1914	Shona
1121	Kurdish	1503	Occitan	1915	Somali
1125	Kirghiz	1513	(Afan) Oromo	1917	Albanian
1201	Latin	1518	Oriya	1918	Serbian
1214	Lingala	1601	Panjabi	1919	Siswati
1215	Laothian	1612	Polish	1920	Sesotho
1220	Lithuanian	1619	Pashto, Pushto	1921	Sundanese
1222	Latvian	1721	Quechua	1923	Swahili
1307	Malagasy	1813	Rhaeto-Romance	2001	Tamil
1309	Maori	1814	Kirundi	2005	Telugu
1311	Macedonian	1815	Romanian	2007	Tajik
1312	Malayalam	1823	Kinyarwanda	2008	Thai
1314	Mongolian	1901	Sanskrit	2009	Tigrinya
1315	Moldavian	1904	Sindhi	2011	Turkmen
1318	Marathi	1907	Sangho	2012	Tagalog
1319	Malay	1908	Serbo-Croatian	2014	Setswana


3-3. Using the rear seat entertainment system


Code	Language	Code	Language	Code	Language
1320	Maltese	1909	Sinhalese	2015	Tonga
1325	Burmese	1911	Slovak	2018	Turkish
1401	Nauru	1912	Slovenian	2019	Tsonga
1405	Nepali	1913	Samoan	2020	Tatar
2023	Twi	2209	Vietnamese	2515	Yoruba
2111	Ukrainian	2215	Volapük	2621	Zulu
2118	Urdu	2315	Wolof		
2126	Uzbek	2408	Xhosa		


□ Adjusting the screen

► When displaying a video

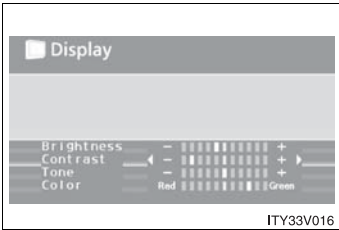


Press  .

Select the brightness, contrast, tone or color, and make adjustments. Press  .

or  to input it.

► When not displaying a video

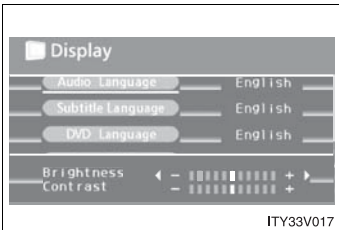

	“-” or “Red”	“+” or “Green”
Brightness	Darkens	Brightens
Contrast	Weakens the contrast	Strengthens the contrast
Tone *	Weakens the tone	Strengthens the tone
Color *	Strengthens the red color	Strengthens the green color

*: Color and tone can be adjusted while a DVD video, video CD or similar is being shown. Only contrast and brightness can be adjusted from the audio and other screens.